

## IMPORTANT NOTES ABOUT EXALITH® RIMS



### 1) Brake pads:

For efficient and long-lasting braking performance, use only Mavic® Special Exalith brake pads as supplied with your wheels. The use of other brake pads may be dangerous for the user and may void the warranty.

### 2) Breaking in the rim's braking surface:

A break-in period is necessary to ensure brake pad performance (approx. 500 km). To guarantee brake pad performance, the user must be careful not to brake suddenly during this period. There is a risk of premature wear to the brake pads during the rim break-in period. Compared with traditional rim surfaces, more frequent brake shoe adjustments may be necessary. The user must check brake pad wear before every ride.

### 3) Limitation of warranty:

A change in the appearance of the rim's brake track may be caused by an accumulation of pollution under the brake pads. This change in appearance does not affect braking performance and is considered normal wear and tear not covered by warranty.

### 4) Rotation direction:

Warning. For efficient and durable braking performance, the wheel must be mounted according to the rotation direction indicated on the rim. Disregard of this instruction may be dangerous for the user and could void the warranty.