


REPLACING A SPOKE NIPPLE ON THE COSMIC CARBONE ULTIMATE WHEEL

Tools needed

- 1 traditional spoke wrench
- 1 small flat screwdriver
- Mavic tensiometer 995 643 01 + tension-reading conversion chart supplied

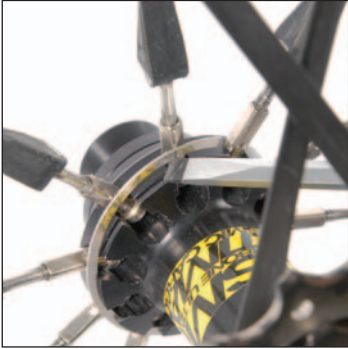

Turn the wheel on the drive side and remove the clip that holds the spokes in place using a small flat screwdriver.



Fully unscrew the nipple to be replaced and remove it via the inside of the hub.



Screw the new nipple 2 turns onto the threaded rod and insert the nipple head into its correct position.



Replace the clip that holds the spokes in place and set the final tension and center the wheel taking care to respect appropriate spoke tensions.